

Muncie FR66 Series PTO Parts & Service Manual

Pro Gear presents Muncie FR66 Series PTO Parts & Service Manual to assist in identifying the parts for your Muncie Power Take Off unit.

If you need any assistance identifying the correct Power Take Off unit for your truck and equipment, contact your Muncie replacement part specialists at Pro Gear and Transmission.

Pro Gear stocks every part for your Muncie PTO including: PTO housings, mounts, driveshafts, gears, bearings, gaskets, cable shift cover assembly, post and plate assembly, brackets, stud kits, seal kits, lever control assembly, air shift cover assembly, direct mount pump conversion kits, stud kits including English and metric references, and much more.

Pro Gear Transmission has same day shipping and 1000's of products in stock and ready to ship internationally for your next project.

For parts or service contact the Muncie specialists at Pro Gear & Transmission, Inc.

1 (877) 776-4600 (407)/872-1901 parts@eprogear.com

Check Inventory

Email Us


Call Us




FR66 SERIES POWER TAKE-OFF

PARTS LIST AND SERVICE MANUAL


NOTE: FOR UNITS BUILT PRIOR TO JUNE 2013

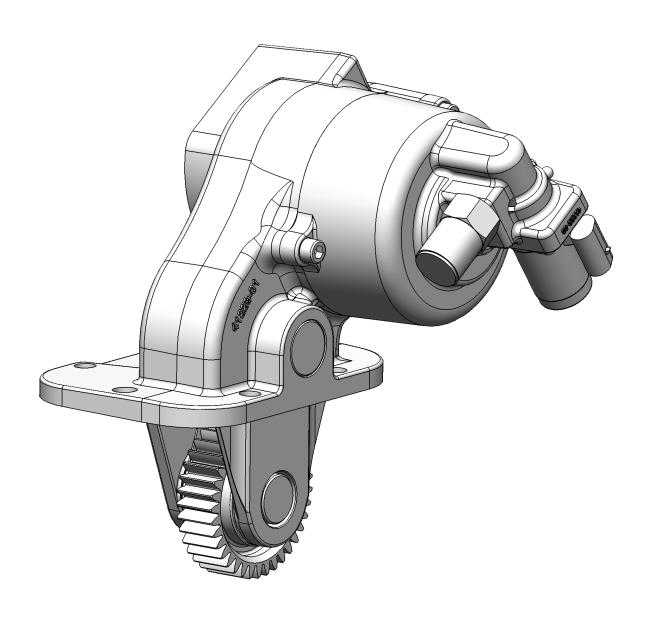


FR66 EXPLODED VIEWS

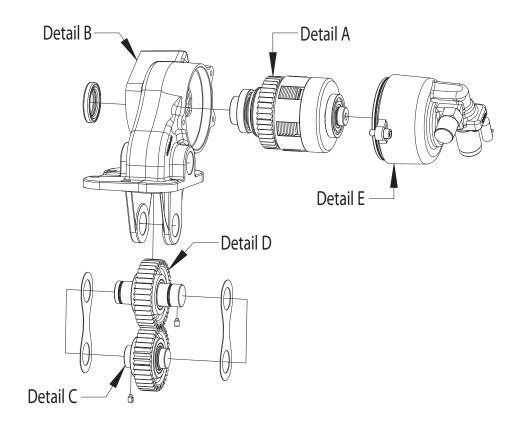

Detail A — Output Shaft Assembly

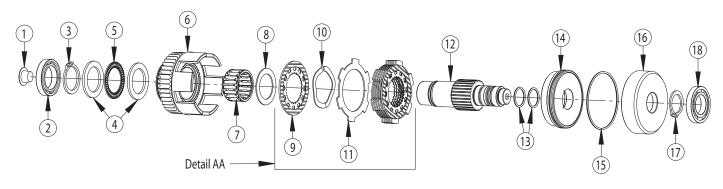


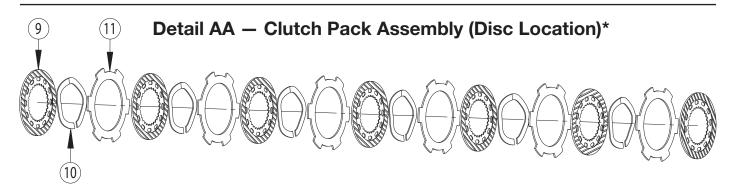


^{*} The clutch pack assembly contains a friction disc followed by a spacer disc and a spring. The assembly should begin and end with a friction disc.

FR66 EXPLODED VIEWS


Detail B — PTO Housing

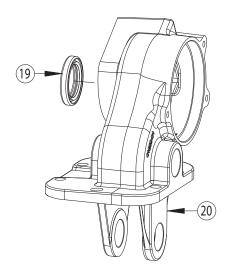


Detail D — Idler Shaft Assembly

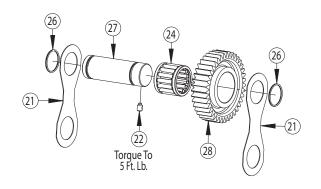

Detail C — Input Shaft Assembly

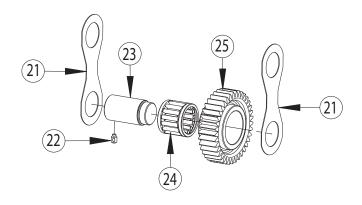

Detail E — End Cover Assembly

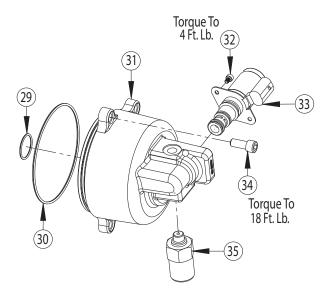


PARTS LIST AND DESCRIPTION


| ITEM | QTY | PART NO. | DESCRIPTION |
|------|-----|----------|------------------|
| 01 | 1 | 25T37387 | Cap Plug |
| 02 | 1 | 10T39147 | Bearing |
| 03 | 1 | 24T35480 | Snap Ring |
| 04 | 2 | 21T29017 | Washer |
| 05 | 1 | 10T37009 | Thrust Bearing |
| 06 | 1 | 02T41804 | Output Gear |
| 07 | 1 | 10T37008 | Needle Bearing |
| 08 | 1 | 21T37085 | Washer |
| 09 | 7 | 49T36259 | Friction Disc |
| 10 | 6 | 27T36286 | Spring |
| 11 | 6 | 49T36258 | Spacer Disc |
| 12 | 1 | 06T41493 | Output Shaft "N" |
| | 1 | 06T41494 | Output Shaft "B" |
| 13 | 2 | 12T39023 | O-Ring |
| 14 | 1 | 49T38881 | Piston |
| 15 | 1 | 12T36540 | O-Ring |
| 16 | 1 | 49T39022 | Piston Cup |
| 17 | 1 | 24T39182 | Snap Ring |

| ITEM | QTY | PART NO. | DESCRIPTION |
|------|-----|----------|---------------------------|
| 18 | 1 | 10T39072 | Bearing |
| 19 | 1 | 11T37790 | Seal |
| 20 | 1 | 01T41230 | PTO Housing |
| 21 | 2 | 10T41590 | Thrust Plate |
| 22 | 2 | 19T34789 | Setscrew |
| 23 | 1 | 07T41238 | Input Idler Shaft |
| 24 | 2 | 10T39145 | Needle Bearing |
| 25 | 1 | 03T41802 | Input Idler Gear |
| 26 | 2 | 12T35577 | O-Ring |
| 27 | 1 | 08T41236 | Reverse Idler Shaft |
| 28 | 1 | 04T41235 | Reverse Idler Gear |
| 29 | 1 | 12T36280 | O-Ring |
| 30 | 1 | 12T36279 | O-Ring |
| 31 | 1 | 15T41234 | End Cover |
| 32 | 2 | 19T40859 | Capscrew |
| 33 | 1 | 35T40860 | Directional Control Valve |
| 34 | 3 | 19T35237 | Capscrew |
| 35 | 1 | 30T60223 | Switch |
| N.S. | 1 | 25T41375 | Plug |
| N.S. | 1 | 26T01627 | Woodruff Key - "B" Shaft |

FR66 INSTALLATION KITS - 43TK5209

FR66 Electric/Hydraulic Shift System — "D"Activation Kit

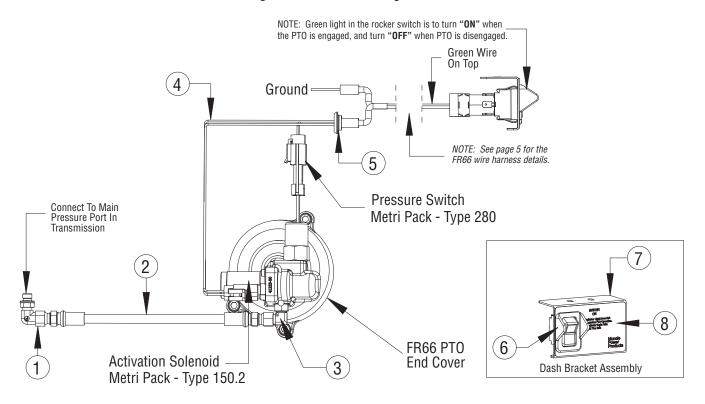


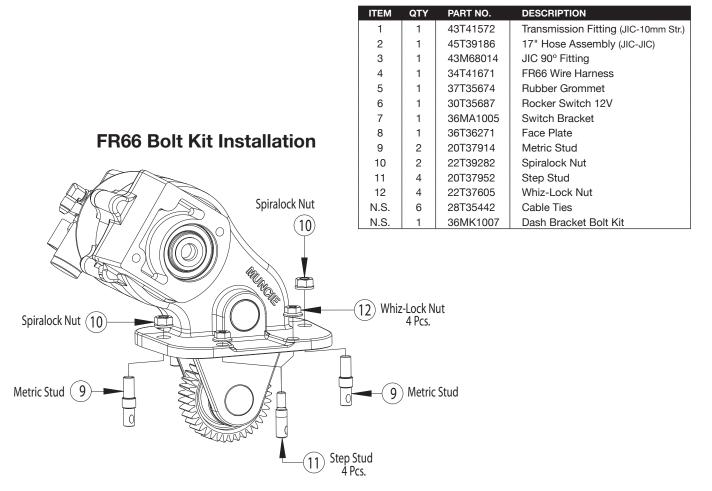


FORD 2011 - DIESEL ENGINE

FR66 "D" Shift Option Harness

FR66 Wire Harness - 34T41671

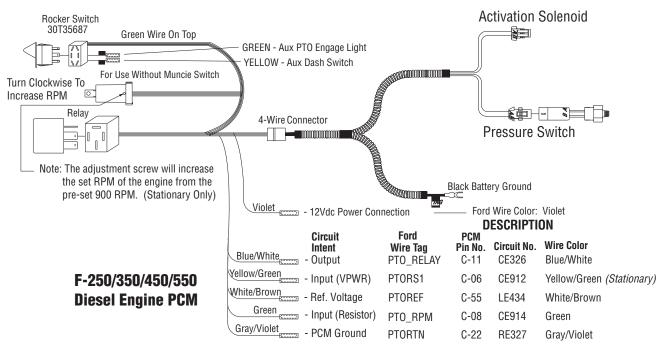


FOR MOBILE USE: Use 34T41896 harness. Connect Blue/Gray wire to Ford Blue/Gray wire PTORS2 (Yellow/Green PTORS1 is not connected.) Other wiring is same as above.

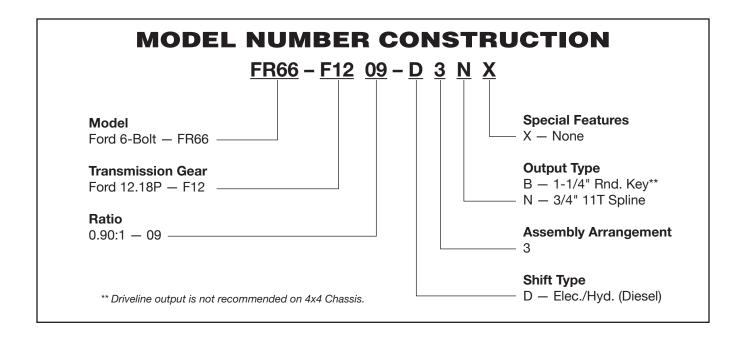

FR66 DIMENSIONS IN INCHES (MM)

"B" Output Option - 1-1/4" Round

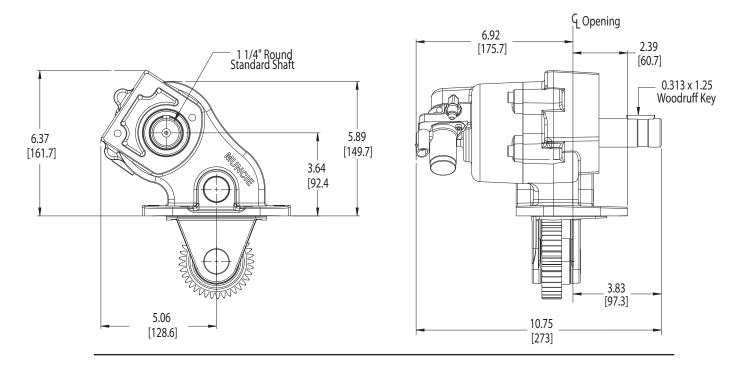


"N" Output Option - 3/4" - 11T

1.14

[29]

1.99 [50.6]

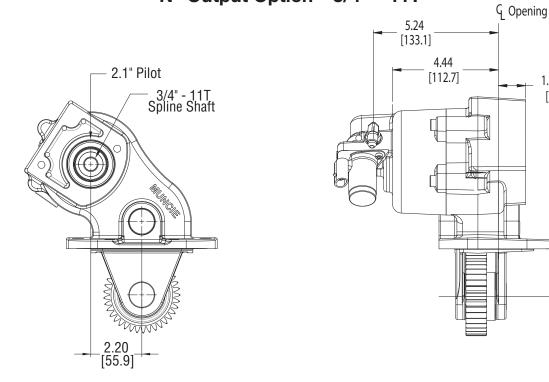



SP10-06 (Rev. 06-19)