

SPICER®

WEATHERLY INDEX 084

T210-9072


February 1989

Supersedes T210-9072

Dated June 1986

9072 Series

Parts List

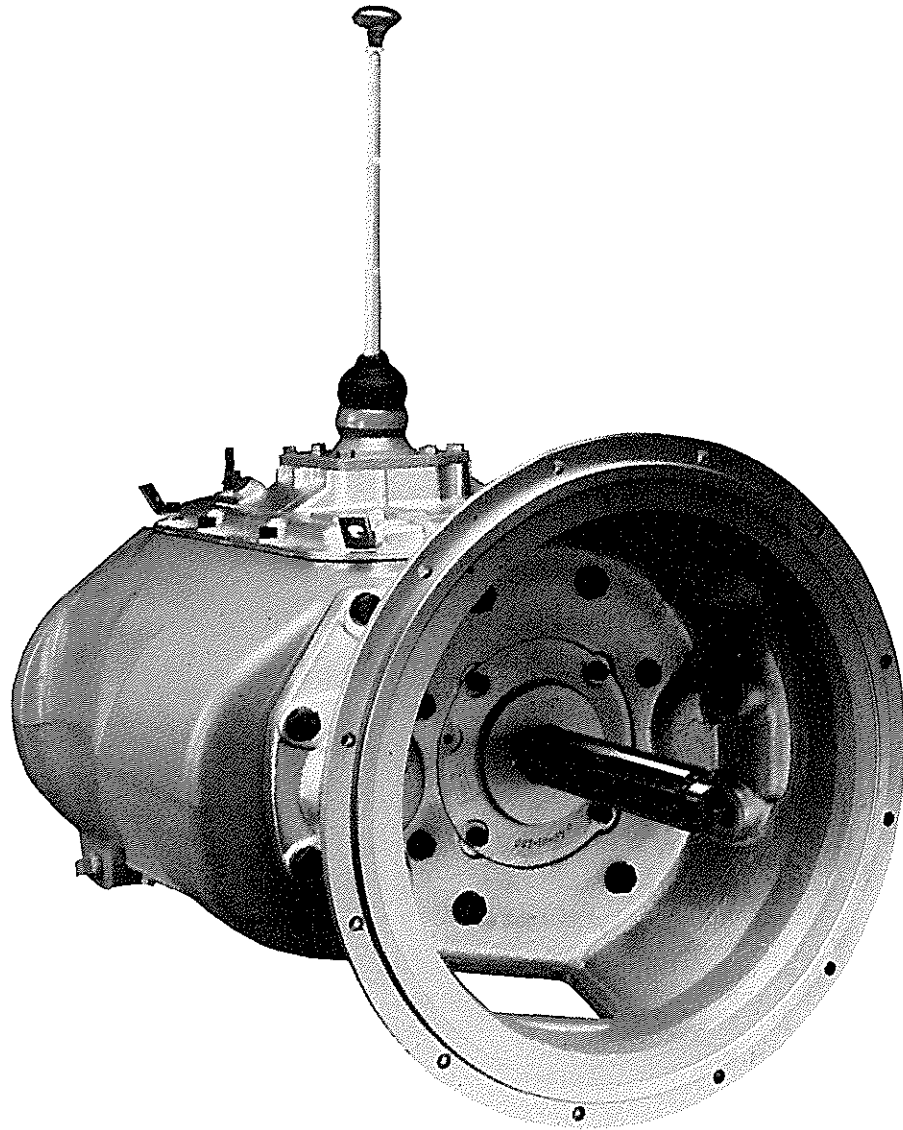

9072 Series Transmission

For parts or service call us
Pro Gear & Transmission, Inc.



1 (877) 776-4600

(407) 872-1901

parts@eprogear.com

906 W. Gore St.

Orlando, FL 32805





MODEL 9072

RATIO TABLE AND IDENTIFICATION

T210-9072


CONTENTS

RATIO TABLE and IDENTIFICATION	1
GEARS and RELATED PARTS	
DRIVE	2-3
MAINSHAFT	2-3
COUNTERSHAFT	4-5
REVERSE IDLER	4-5
CASE, BEARING CAP and RELATED PARTS	
CLUTCH HOUSING	6-7
DRIVE GEAR BEARING CAP	6-7
CASE	6-7
MAINSHAFT REAR BEARING CAP	6-7
COUNTERSHAFT REAR BEARING CAP	6-7
COMPANION FLANGES, FLANGE YOKES and END YOKES	8
CLUTCH HOUSING DIMENSIONS	9
SHIFTER HOUSING ASSEMBLY	
CENTER CONTROL	10-11
FORWARD CONTROL	12-13
REMOTE CONTROL ASSEMBLY	
HIGH ROD TYPE	14-15
SHIFT LEVER and TOWER PARTS	16-17
CLUTCH RELEASE PARTS DIMENSIONS	18-19
SERVICE PARTS OVERHAUL KITS	20-21
TABULATED BILLS of MATERIAL	22-23

RATIO TABLE

GEAR	RATIO	% STEP
1	10.06	
2	6.00	68
3	3.65	64
4	2.61	40
5	1.84	41
6	1.32	40
7	1.00	32
R	10.06	

SHIFT PATTERN

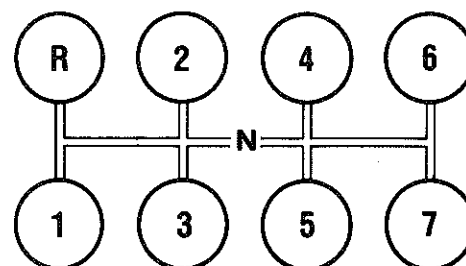

IDENTIFICATION

The Name Plate (NP-96) affixed to the REAR of the Transmission is stamped with information:

In requesting more information on these transmissions, please furnish this information.

Abbreviations used in this parts list include:

N.S. — Not Shown

N.S.S. — Not Sold Separately

A.R. — As Required


SERIAL

B/M No. MODEL

MODEL 9072


GEARS AND RELATED PARTS

SPICER®

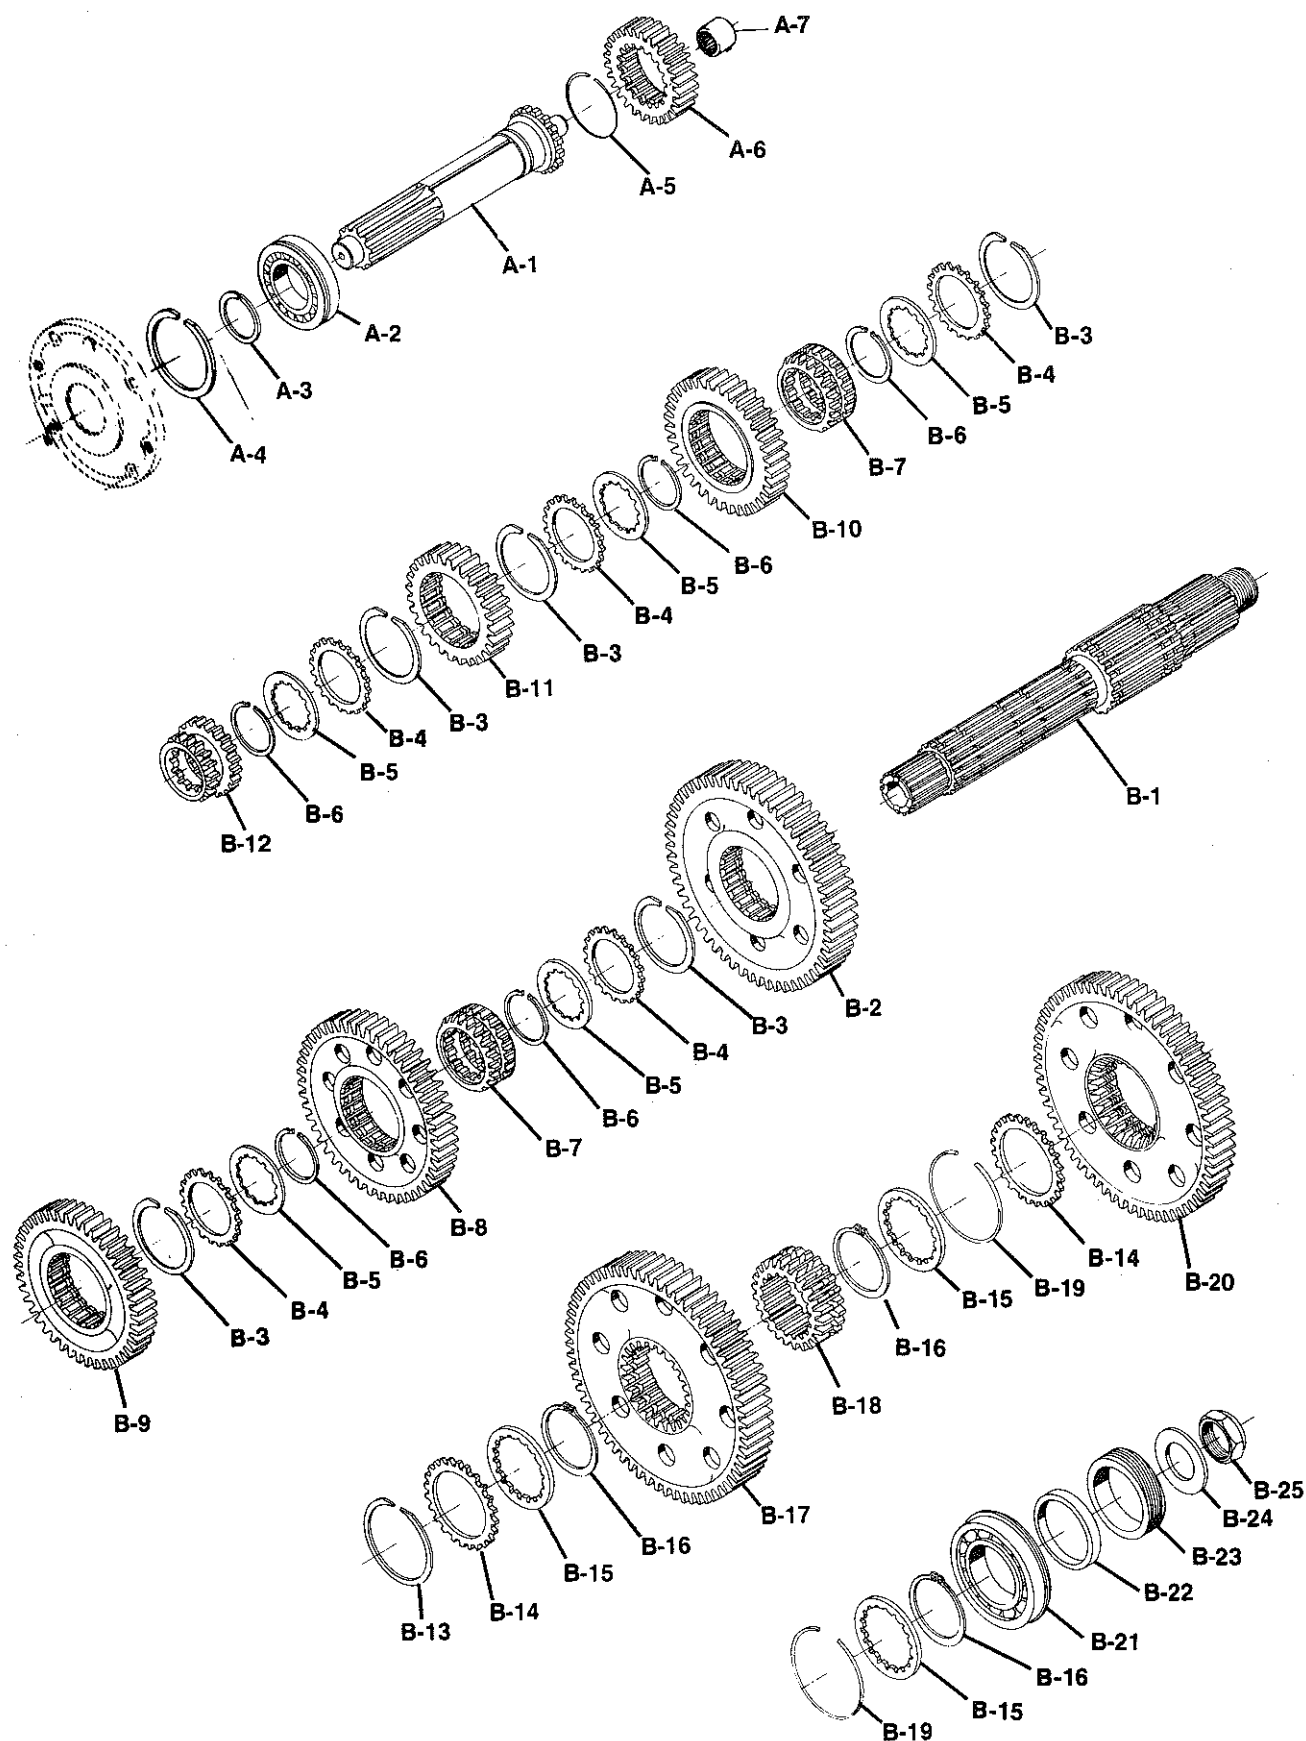



Ref. No.	Part Number	Part Description	Qty.
Drive Gear Group (See Tab Bills for Applicable Input Shaft)			
A-1	97-35-65-1X*	Input Shaft—2.00"-10 #306 Pilot	1
	97-35-66-1X*	Input Shaft—1.750"-10 #306 Pilot	1
	97-35-81-1X*	Input Shaft—1.750"-10 #205 Pilot	1
A-2	550992	Bearing—Front	1
A-3	97-381-42	Snap Ring—Bearing Retaining	1
A-4	97-381-41	Snap Ring—Bearing Cap Retaining	1
A-5	97-381-2	Snap Ring—Drive Gear Retaining	1
A-6	97-35-64	Gear—Mainshaft Drive (28T)	1
A-7	550953	Bearing—Drive Gear Pocket	1
Mainshaft Group			
B-1	97-362-53	Mainshaft	1
B-2	97-8-204	Gear—2nd (56T)	1
B-3	97-381-1	Snap Ring—Internal—small	5
B-4	330814	Thrust Washer—External (20T)	5
B-5	330730	Thrust Washer—Internal (15T)	5
B-6	97-381-4	Snap Ring—External—small	5
B-7	97-465-21	Clutch Collar—2nd, 3rd, 4th, and 5th	2
B-8	97-8-205	Gear—3rd (48T)	1
B-9	97-8-206	Gear—4th (42T)	1
B-10	97-8-207	Gear—5th (36T)	1
B-11	97-8-208	Gear—6th (28T)	1
B-12	97-465-51	Clutch Collar—6th & 7th	1
B-13	98-381-2	Snap Ring—Internal—large	1
B-14	330810	Thrust Washer—External (24T)	2
B-15	330869	Thrust Washer—Internal—large	3
B-16	98-381-1	Snap Ring—External—large	3
B-17	97-8-113	Gear—1st (64T)	1
B-18	97-465-24	Clutch Collar—1st and Reverse	1
B-19	97-381-32	Snap Ring—Internal (Reverse gear)	2
B-20	97-8-182	Gear—Reverse (64T)	1
B-21	550925	Bearing—Rear	1
B-22	97-37-17	Spacer	2
B-23	See Tab Bills	Speedometer Drive Gear	1
or	97-37-7	Spacer (used in place of speedometer gear)	1
B-24	330734	Washer	1
B-25	545065	Nut	1

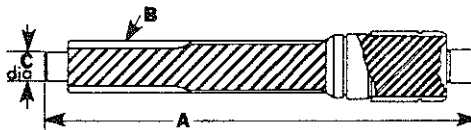

DRIVE GEAR TABLE

A Length	B Spline Dia. Teeth	C Pilot Size	SAE No.	Input Shaft Part No.
13.062"	2.000"-10	1.180"	306	97-35-65-1X*
13.062"	1.750"-10	1.180"	306	96-35-66-1X*
13.062"	1.750"-10	.983	205	97-35-81-1X*

* Includes (1) each 97-381-2, 97-381-41, 97-381-42 Snap Rings


PARTS LISTED IN THIS CATALOG MAY NO LONGER BE AVAILABLE, USE WITH TRANSMISSION SUPERSEDING LIST.

MODEL 9072

GEARS AND RELATED PARTS



T210-9072

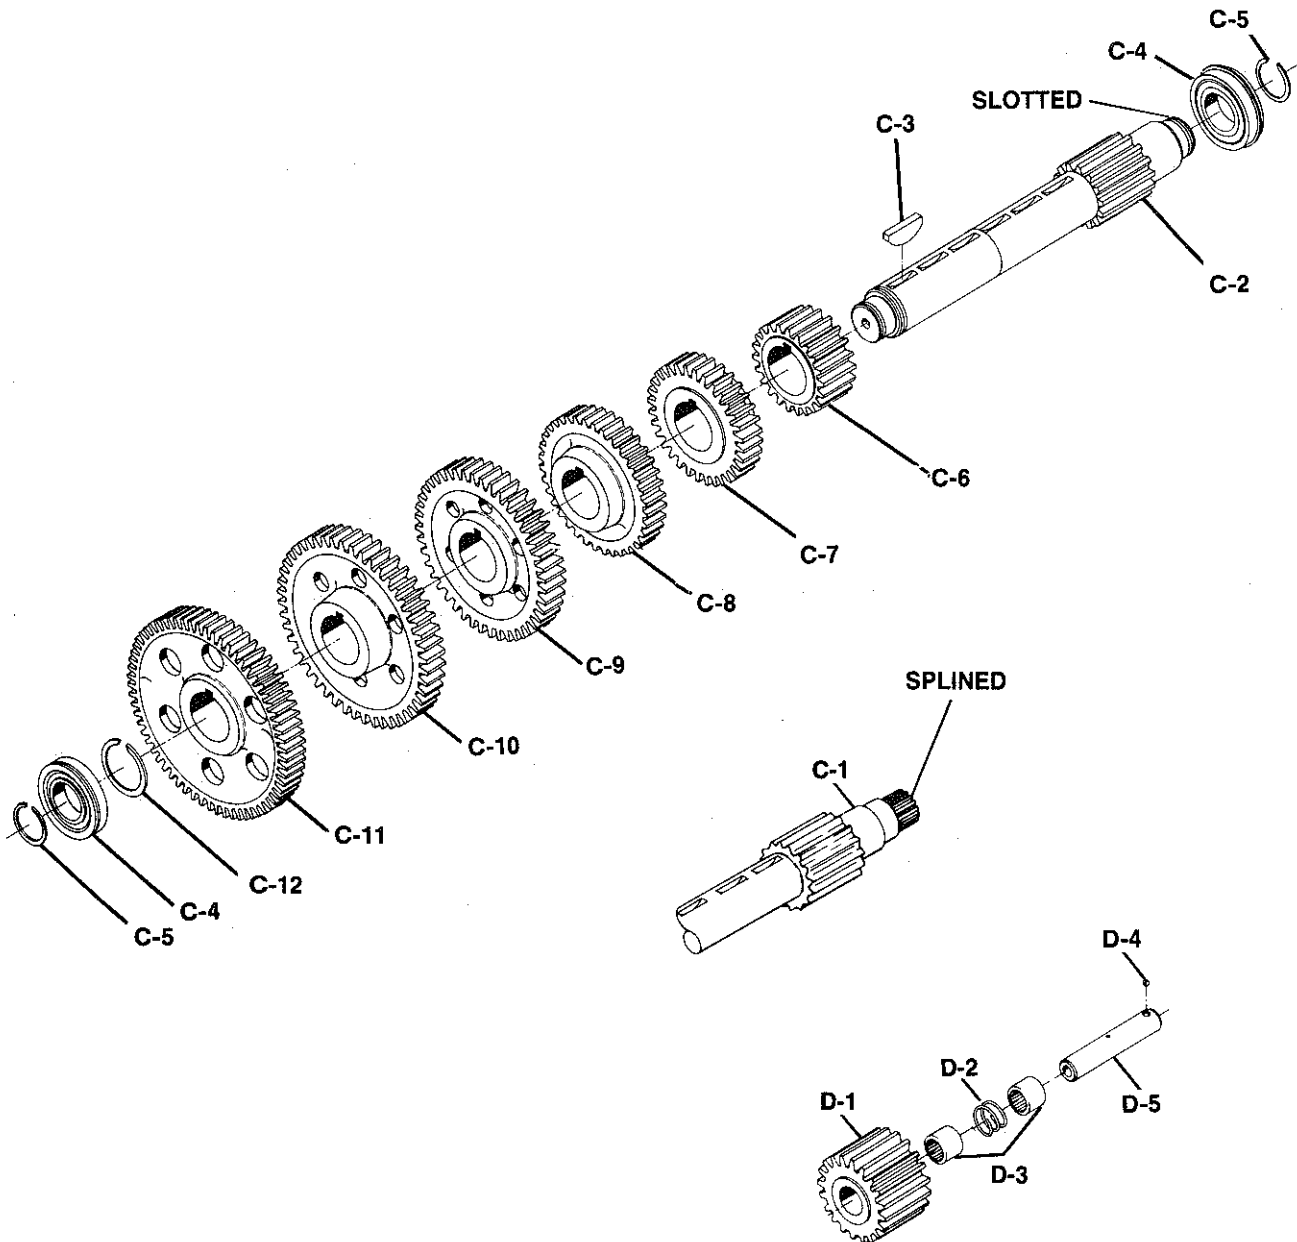



Ref. No.	Part Number	Part Description	Qty.
Countershaft Group			
C-1	97-30-69	Countershaft—Right side (15T) (Splined for P.T.O.)	1
C-2	97-30-68	Countershaft—Left side (15T) (Slotted for Pump)	1
C-3	500010-8	Woodruff Key #29	12
C-4	550959	Bearing	4
C-5	54-381-1	Snap Ring	4
C-6	97-196-146	Gear—2nd (22T)	2
C-7	97-196-147	Gear—3rd (31T)	2
C-8	97-196-148	Gear—4th (38T)	2
C-9	97-196-150	Gear—5th (46T)	2
C-10	97-196-152	Gear—6th (50T)	2
C-11	97-1-45	Gear—Countershaft Drive	2
C-12	97-381-33	Retaining Ring	2
Reverse Idler Gear Group			
D-1	97-5-1	Gear—Reverse Idler (21T)	2
D-2	97-37-1	Bearing—Spacer	2
D-3	550886	Bearing	4
D-4	500566-8	Lockball—9/32"	2
D-5	97-60-1	Shaft—Gear	2

CASE, BEARING CAP AND RELATED PARTS







Ref. No.	Part Number	Part Description	Qty.
		Clutch Housing Group	
E-1	See Tab Bills	Clutch Housing Assembly (See chart on page 11)	1
E-2	N.S.S.	Clutch Housing	1
E-3	128C-20	Bushing—Clutch Release Shaft	2
E-4	97-96-18-1X	Hand Hole Cover Assembly	1
N.S.	500169-1	Zerk Fitting—Grease	A.R.
E-5	545001	Bolt—1/2"-13 x 1 1/4" hex head self-locking	4
E-6	170-W	Washer	4
E-7	545008-3	Bolt—5/8"-11 x 1 3/4"	10
E-8	330829	Washer	10
N.S.	545056-4	Anaerobic Sealant	A.R.
		Drive Gear Bearing Cap Group	
F-1	97-223-1	Gasket	1
F-2	97-19-52-1X	Bearing Cap and Oil Seal Assembly (See Tab Bills)	1
F-3	N.S.S.	Bearing Cap (Casting #97-19-37)	1
F-4	97-463-36-1X	Oil Seal—(with Installation sleeve)	1
F-5	97-381-41	Snap Ring	1
F-6	545002-4	Bolt—3/8"-16 x 1" hex head self-locking	4
		Case Group	
G-1	97-15-54-1X	Case Assembly	1
N.S.	NP-97	Nameplate	1
N.S.	252-SP	Pin—Nameplate	4
G-2	62-39-3	Filler Plug (magnetic)	1
G-3	62-39-3	Drain Plug (magnetic)	1
G-4	97-39-1	Drain Plug (magnetic)	1
G-5	274-SP	Dowel Pin (to locate shifter housing to case)	2
N.S.	545056-3	Anaerobic Sealant—Aperture covers	A.R.
G-6	73-267-1	Eight Bolt P.T.O. Aperture Cover	1
G-7	545012	Bolt—7/16"-14 x 3/4" flanged self-locking	8
G-8	50-267-2	Six Bolt P.T.O. Aperture Cover	1
G-9	330800	Bolt—7/16"-14 x 3/4"	6
		Mainshaft Rear Bearing Cap—For Mechanical/Electronic Speedo	
H-1	97-223-2	Gasket	1
H-2	See Tab Bills	Bearing Cap , Seal and Bushing Assembly	1
H-4	N.S.S.	Bearing Cap	1
H-5	60-475-1	Speedometer Bushing	1
H-6	97-463-33	Oil Seal	1
H-7	545001-4	Bolt—1/2"-13 x 1 1/2" hex head self-locking	4
H-8	545001-8	Bolt—1/2"-13 x 2 1/2" hex head self-locking	2
H-9	See Tab Bills	Gear—Speedometer Driven/Electronic Signal Gear	1
or			
N.S.	55-334-1	Plug—Speedometer outlet	1
H-10	55-454-1	Sleeve—Speedometer Driven Gear	1
N.S.	545021	Plug—Speedometer outlet	2
		Countershaft Rear Bearing Cap Group	
N.S.	545056-7	Anaerobic Sealant	A.R.
J-1	97-22-23	Bearing Cap	2
J-2	97-96-23	Reverse Idler Shaft Cover	2
J-3	545015	Bolt—3/8"-16 x 15/16" flanged self-locking	10
N.S.	330564-1	Lift Hook—Reverse Idler Cover	2

MODEL 9072

COMPANION FLANGES and END YOKES



T210-9072

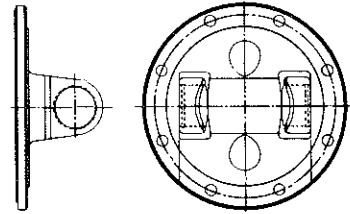
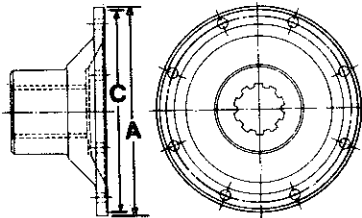


COMPANION FLANGE

FLANGE YOE

Companion Flanges and Flange Yokes

A Joint Series	Flange Diameter	Companion Flange Assembly	Companion Flange	G to Flange Face Length	C Pilot Diameter F-Female M-Male	Mates With	
						Flange Yoke	Series
1710	8"	—	6-1-4881	3"	F-7 $\frac{3}{4}$ "	6-2-749	1710
1710	8"	—	6-1-4571	3"	F-7 $\frac{3}{4}$ "	6-2-749	1710
1810	8"	—	6.5-1-1981	3"	F-7 $\frac{3}{4}$ "	6.5-2-329	1810
1810	8"	—	6.5-1-1991	3"	F-7 $\frac{3}{4}$ "	6.5-2-329	1810
1810	8"	—	6.5-1-2151	2 $\frac{3}{4}$ "	F-7 $\frac{3}{4}$ "	6.5-2-329	1810

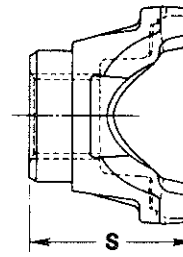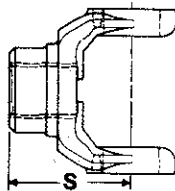

FULL ROUND

U-BOLT—BRG. STRAP—HALF ROUND

Series	Yoke Style	End Yoke Part Number	S End of Hub To Center Line Length	Momentary Joint Angle	Brake Size
1610	Half Round	5-4-6531-1	5 $\frac{1}{16}$ "	21 $\frac{1}{2}$ °	—
1710	Full Round	6-4-5351	5 $\frac{3}{16}$ "	21°	—
1710	Half Round	6-4-5351-1	5 $\frac{3}{16}$ "	21°	—
1760	Full Round	6.3-4-41	5 $\frac{9}{16}$ "	30°	—
1760	Half Round	6.3-4-41-1	5 $\frac{9}{16}$ "	30°	—
1810	Full Round	6.5-4-3021	5 $\frac{9}{16}$ "	30°	—

MODEL PS97-7


SPICER®




T210-PS97-7

CLUTCH HOUSING DIMENSIONS

Size No.	A Pilot Dia.	B O.D.
1	20 $\frac{1}{8}$ "	21 $\frac{3}{4}$ "
2	17 $\frac{5}{8}$ "	19 $\frac{1}{4}$ "

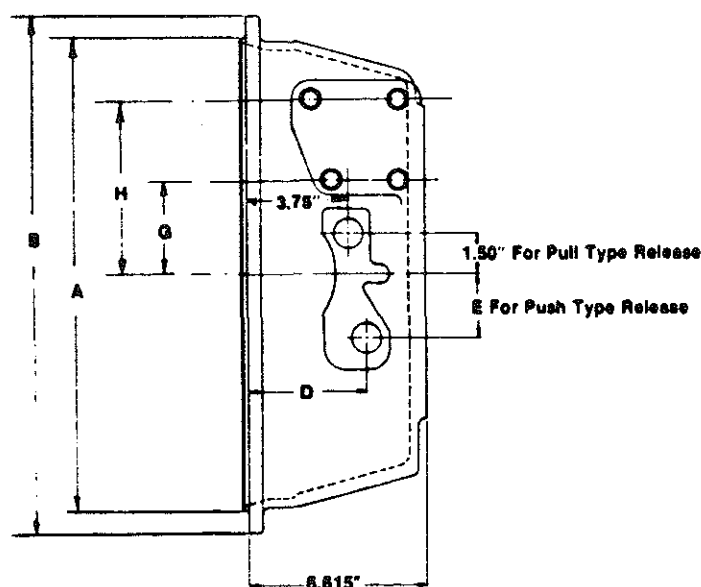

NODAL MOUNT

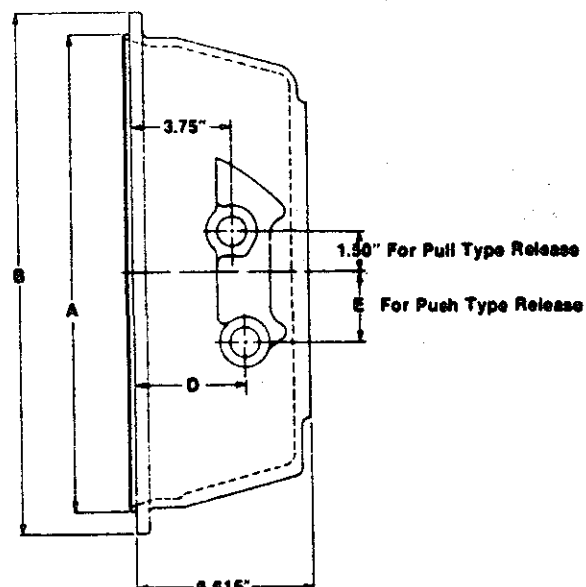

STANDARD MOUNT


Part No.	Casting No.	Material	SAE #	D Lower Hole Dim. Face To Center Hole	E Below Center	G Above Center	H Above Center
312795X*	C97-518-4	Iron	2	4.187"	2.625"	—	—
312961X	C97-518-13-1	Iron	1	3.750"	1.500"	4.00"	8.50"
97-518-14-1X*	C97-518-7	Iron	2	4.375"	2.375"	3.50"	6.50"
97-518-15-1X	C97-518-2	Iron	1	4.187"	2.625"	—	—
97-518-16-1X	C97-518-19-1	Alum.	1	4.188"	2.625"	—	—
97-518-18-1X	C97-518-17	Alum.	2	4.187"	2.625"	—	—
97-518-25-1X	C97-518-13-1	Iron	1	3.750"	1.500"	4.00"	8.50"
97-518-28-1X	C97-518-29	Alum.	1	3.750"	1.500"	—	—
97-518-31-1X	C97-518-29	Alum.	1	3.750"	1.500"	4.00"	8.50"
97-518-49-1X*	C97-518-7	Iron	2	3.750"	2.375"	3.50"	6.50"

*Nodal Mount.

PARTS LISTED IN THIS CATALOG MAY NO LONGER BE AVAILABLE, USE WITH TRANSMISSION SUPERSEDING LIST.

MODEL 9072

SHIFTER HOUSING ASSEMBLY

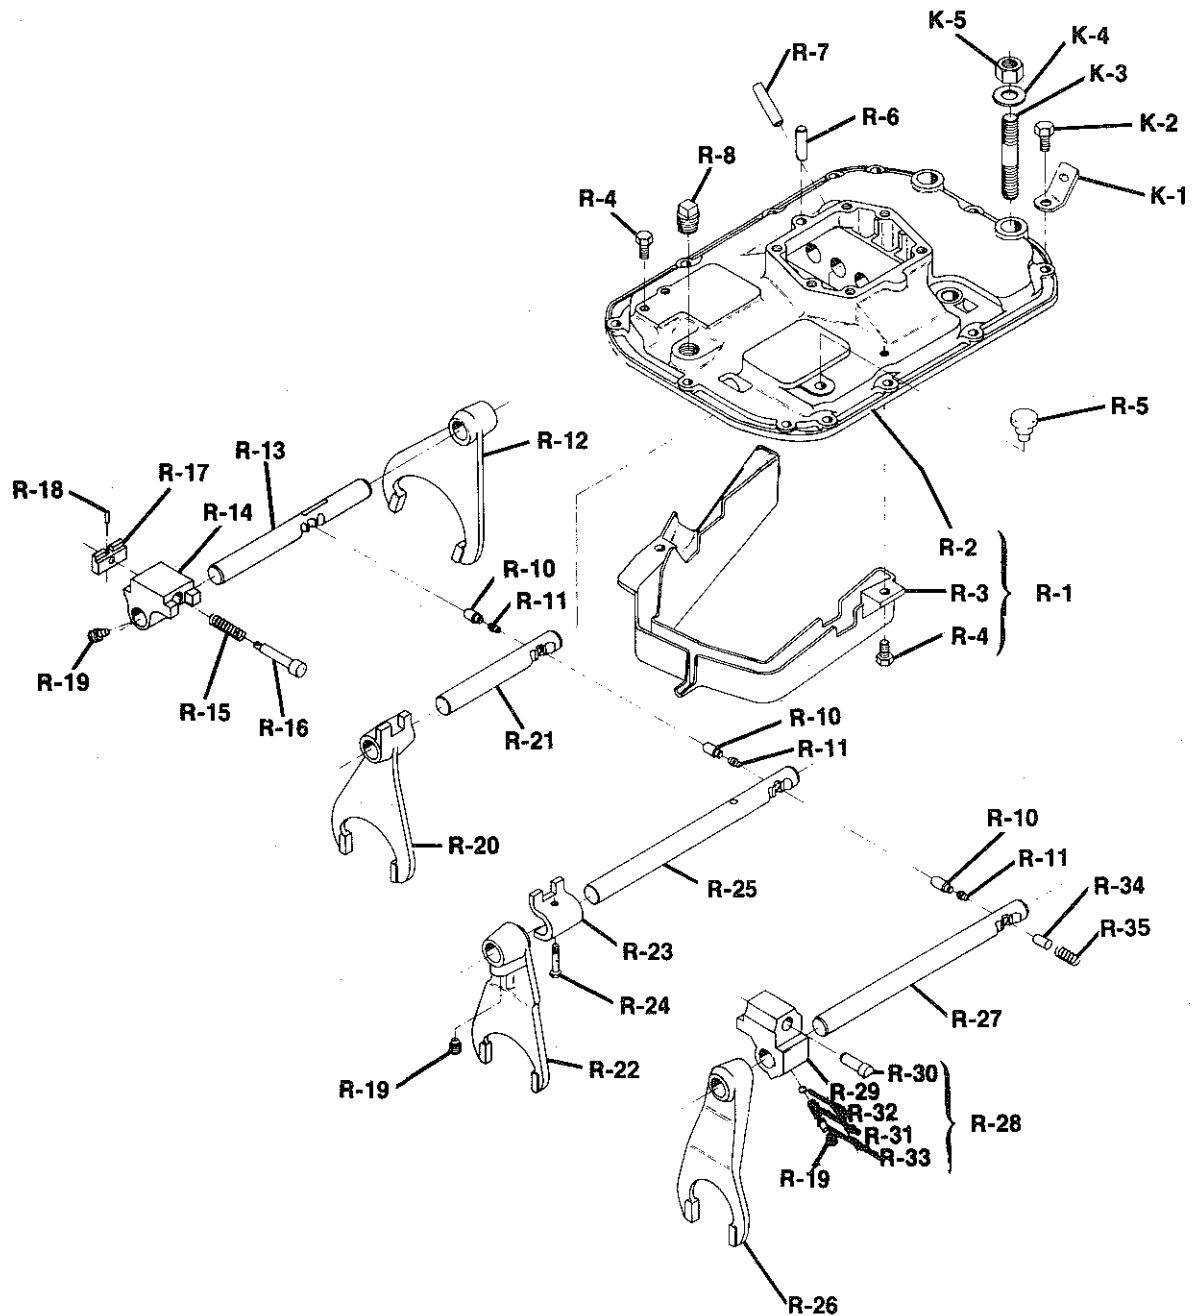CENTER CONTROL



MODEL 9072

SHIFTER HOUSING ASSEMBLY CENTER CONTROL

T210-9072

Ref. No.	Part Number	Part Description	Qty.
	See Tab Bills	Shifter Housing Assembly	1
R-1	97-16-79-1X	Shifter Housing and Oil Trough Assembly	1
R-2	N.S.S.	Shifter Housing	1
R-3	330918	Oil Trough	1
R-4	330800	Bolt—3/8"-16 x 3/4" flanged self-locking	3
R-5	312268	Breather	1
R-6	545000	Blocker	1
R-7	330739-1	Pin—Backup light	1
R-8	500114	Oil Return Hole Plug	1
N.S.	545056-5	Anaerobic Sealant	A/R
		For All Shift Forks and Rods	
R-10	97-12-2	Interlock—Shift Rod	3
R-11	97-438-19	Pin—Interlock	3
		First and Reverse Shift Rod Group	
R-12	97-66-53	Shift Fork	1
R-13	97-67-230	Shift Rod	1
R-14	97-354-11	Shift Rod Bracket	1
R-15	97-72-2	Spring—Plunger	1
R-16	97-438-1	Plunger	1
R-17	330736	Block—Shift bracket	1
R-18	500593-6	Pin—Plunger	1
R-19	545063	Screw—7/16"-20 x 3/4"	6
		Second and Third Shift Rod Group	
R-20	97-66-24	Shift Fork	1
R-21	97-67-231	Shift Rod	1
		Fourth and Fifth Shift Rod Group	
R-22	97-66-11	Shift Fork	1
R-23	97-354-27	Shift Rod Bracket	1
R-24	545072	Bolt—1/4"-28 x 1 3/8" hex head self-locking	1
R-25	97-67-232	Shift Rod	1
		Sixth and Seventh Shift Rod Group	
R-26	97-66-102	Shift Fork	1
R-27	97-67-233	Shift Rod	1
R-28	97-354-21-3X	Shift Rod Bracket Assembly—6th and 7th	1
R-29	97-354-21	Shift Rod Bracket	1
R-30	97-438-17	Plunger	1
R-31	97-72-28	Spring—plunger	1
R-32	50-80-9	Poppet ball	1
R-33	97-438-20	Pin—Spring pilot	1
R-34	97-12-4	Poppet	1
R-35	97-72-29	Spring—poppet	1
		Parts Listed Below are not Included in Assembly	
K-1	330564-1	Lift Hook	4
K-2	545002-4	Bolt—3/8"-16 x 1 1/8" hex head self-locking	10
K-3	330360-18	Stud—5/8"-11 and 5/8"-18 x 4"	2
or	330360-15	Stud—5/8"-11 and 5/8"-18 x 3 1/2"	2
K-4	500365-43	Washer—5/8" flat	2
K-5	500371-7	Nut—5/8"-18	2
N.S.	545028-4	Cover Bolt—7/16"-14 x 1 1/8" hex head self-locking	6
N.S.	545056-5	Anaerobic Sealant	A/R

PARTS LISTED IN THIS CATALOG MAY NO LONGER BE AVAILABLE, USE WITH TRANSMISSION SUPERSEDING LIST.


MODEL 9072

SHIFTER HOUSING ASSEMBLY



T210-9072

FORWARD CONTROL

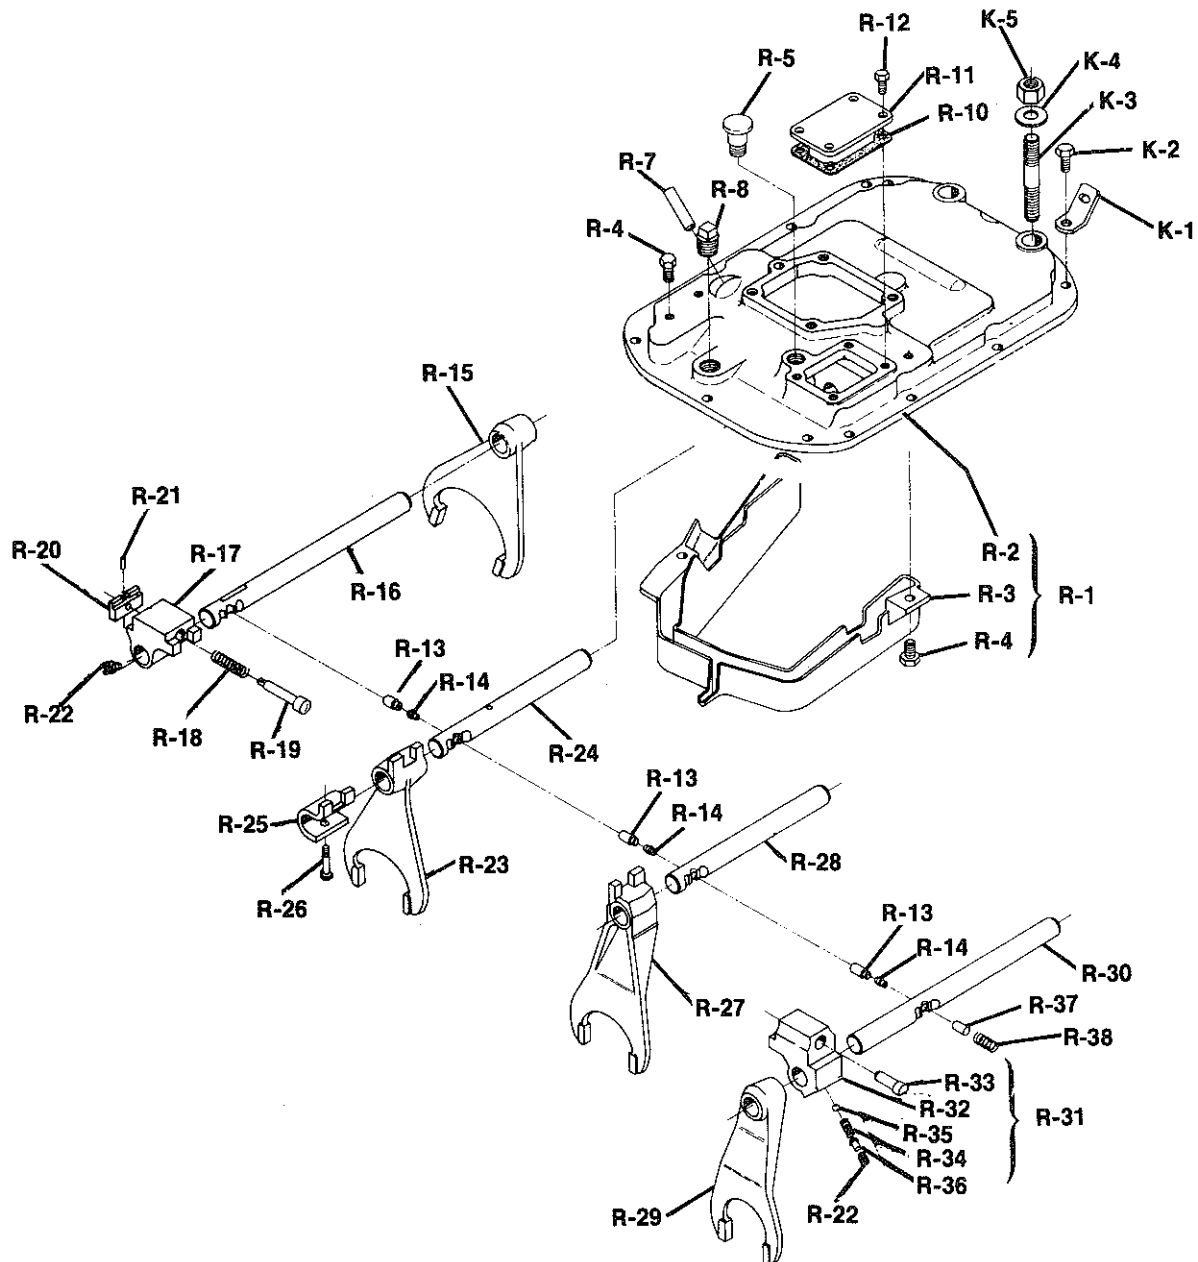

SPICER®**MODEL 9072****SHIFTER HOUSING ASSEMBLY
FORWARD****T210-9072**


Ref. No.	Part Number	Part Description	Qty.
	See Tab Bills	Shifter Housing Assembly	1
R-1	97-16-79-1X	Shifter Housing and Oil Trough Assembly	1
R-2	N.S.S.	Shifter Housing	1
R-3	330918	Oil Trough	1
R-4	330800	Bolt—3/8"-16 x 3/4" flanged self-locking	3
R-5	312268	Breather	1
R-6	545000	Blocker	1
R-7	330739-1	Pin—Backup light	1
R-8	500114	Oil Return Plug	1
N.S.	545056-5	Anaerobic Sealant	A/R
R-10	97-223-4	Gasket	1
R-11	97-96-2	Cover—Shifter housing Aperture Cover	1
R-12	545005-1	Bolt—5/16"-18 x 5/8" hex head self-locking	4
		For All Shift Forks and Rods	
R-13	97-12-2	Interlock—Shift Rod	3
R-14	97-438-19	Pin—Interlock	3
		First and Reverse Shift Rod Group	
R-15	97-66-53	Shift Fork	1
R-16	97-67-234	Shift Rod	1
R-17	97-354-11	Shift Rod Bracket	1
R-18	97-72-2	Spring—Plunger	1
R-19	97-438-1	Plunger	1
R-20	330736	Block—Shift bracket	1
R-21	500593-6	Pin—Plunger	1
R-22	545063	Screw—7/16"-20 x 3/4"	6
		Second and Third Shift Rod Group	
R-23	97-66-122	Shift Fork	1
R-24	97-67-235	Shift Rod	1
R-25	97-354-27	Shift Rod Bracket	1
R-26	545072	Bolt—1/4"-28 x 3/8" hex head self-locking	1
		Fourth and Fifth Shift Rod Group	
R-27	97-66-104	Shift Fork	1
R-28	97-67-236	Shift Rod	1
		Sixth and Seventh Shift Rod Group	
R-29	97-66-102	Shift Fork	1
R-30	97-67-284	Shift Rod	1
R-31	97-354-21-3X	Shift Rod Bracket Assembly—6th and 7th	1
R-32	97-354-21	Shift Rod Bracket	1
R-33	97-438-17	Plunger	1
R-34	97-72-28	Spring—plunger	1
R-35	50-80-9	Poppet ball	1
R-36	97-438-20	Pin—Spring pilot	1
R-37	97-12-4	Poppet	1
R-38	97-72-29	Spring—poppet	1
		Parts Listed Below are not Included in Assembly	
K-1	330564-1	Lift Hook	4
K-2	545002-4	Bolt—3/8"-16 x 1 1/8"	10
K-3	330360-18	Stud—5/8"-11 and 5/8"-18 x 4"	2
or	330360-15	Stud—5/8"-11 and 5/8"-18 x 3 1/2"	2
K-4	500365-43	Washer—5/8" flat	2
K-5	500371-7	Nut—5/8"-18	2
N.S.	545028-4	Cover Bolt—7/16"-14 x 1 1/8" hex head self-locking	6
N.S.	545056-5	Anaerobic Sealant	A/R

PARTS LISTED IN THIS CATALOG MAY NO LONGER BE AVAILABLE, USE WITH TRANSMISSION SUPERSEDING LIST.

MODEL 9072
REMOTE CONTROL ASSEMBLY
HIGH ROD TYPE



T210-9072

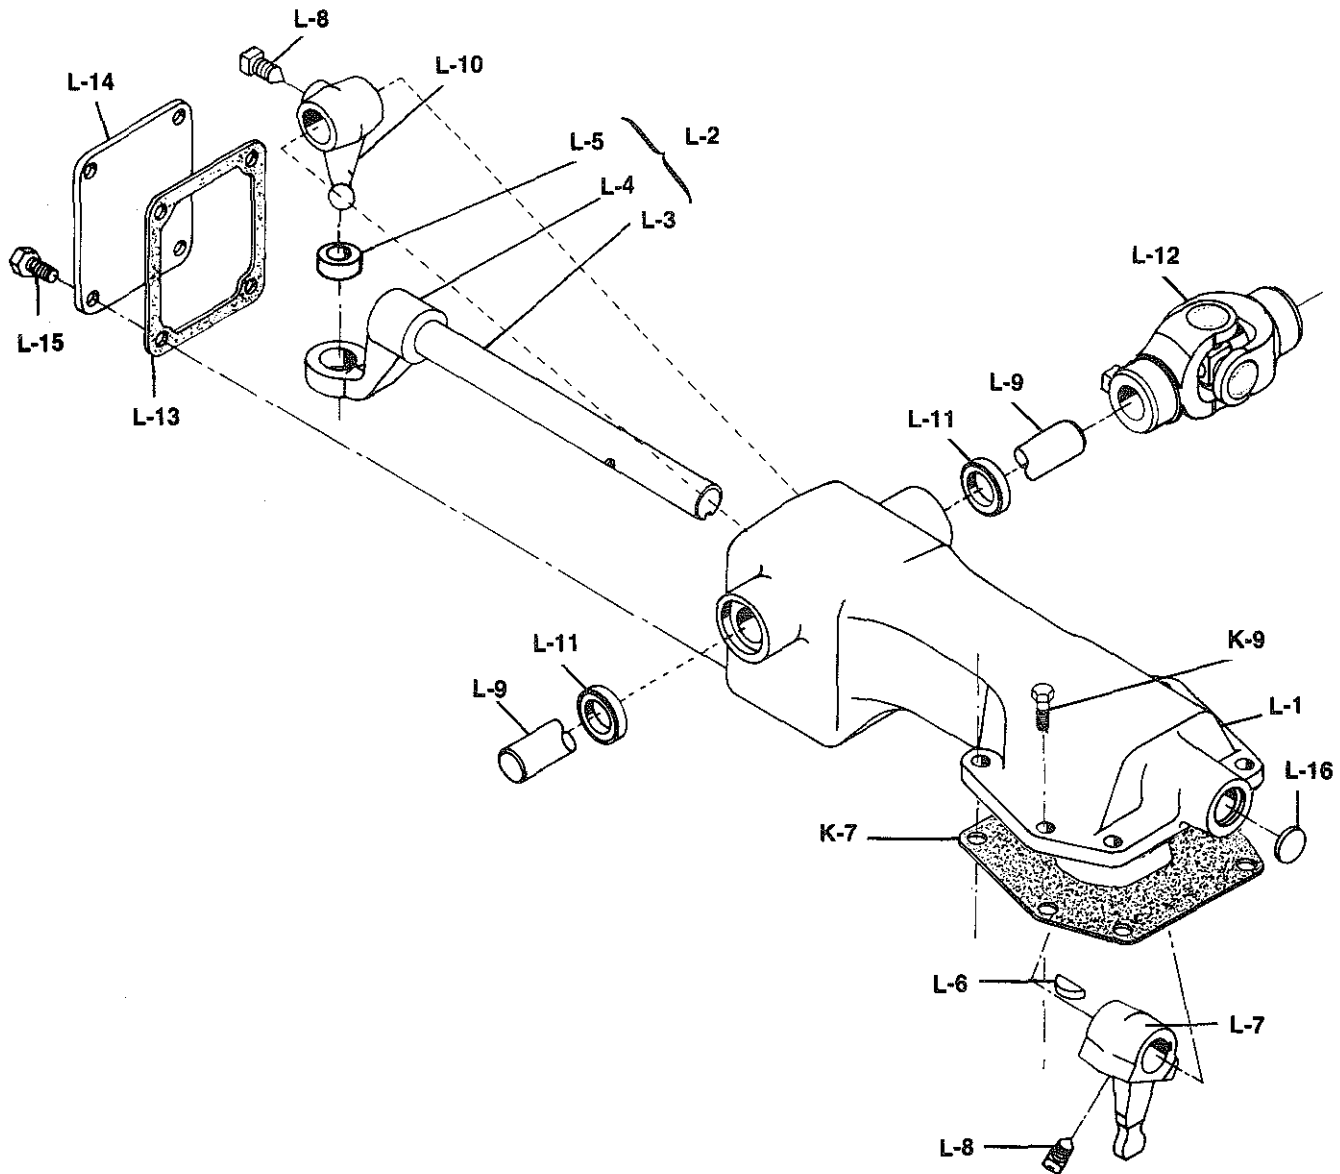



MODEL 9072

REMOTE CONTROL ASSEMBLY


T210-9072

Ref. No.	Part Number	Part Description	8049X	97-18-4-2X	97-18-6-2X	73-16-3-1X	312752-2X	85-16-42-2X	311890-1X	97-18-3-2X
	See Tabs Bills	Cover and Joint Assembly—Remote Control	1	1	1	1	1	1	1	1
	311866X	Cover Assembly	1							
	312755X	Cover Assembly					1			
	311914X	Cover Assembly				1			1	
	97-18-16-1X	Cover Assembly			1					
	85-16-42-1X	Cover Assembly—(Rotated 180 degrees and Welded)						1		
	97-18-3-1X	Cover Assembly								1
	97-18-4-1X	Cover Assembly		1						
L-1	N.S.S.	Remote Control Cover	1	1	1	1	1	1	1	1
N.S.	82-24-3	Bushing—Remote Control Cover	4	4	4	4	4	4	4	4
L-2	8039X	Shift Finger Rod and Bracket Assembly	1							
	311888X	Shift Finger Rod and Bracket Assembly				1			1	
	312754X	Shift Finger Rod and Bracket Assembly					1			
	97-65-39-1X	Shift Finger Rod and Bracket Assembly		1						
	97-65-41-1X	Shift Finger Rod and Bracket Assembly			1					
	85-65-11-1X	Shift Finger Rod and Bracket Assembly						1		
	97-65-32-1X	Shift Finger Rod and Bracket Assembly								1
L-3	N.S.S.	Rod—Shift Finger	1	1	1	1	1	1	1	1
L-4	N.S.S.	Bracket—Shift Finger	1	1	1	1	1	1	1	1
L-5	85-24-4	Bushing—Shift Bracket	1	1	1	1	1	1	1	1
L-6	500007-19	Woodruff Key #11	1	1	1	1	1	1	1	1
L-7	82-6-9	Finger—Inner Shift	1	1	1	1	1	1	1	1
L-8	545063	Bolt—7/16"-20 x 13/16" Hex-head self-locking	2	2	2	2	2	2	2	2
L-9	82-65-5	Rod—Remote Control	1	1	1	1		1	1	1
	82-65-22	Rod—Remote Control					1			
L-10	82-6-7	Finger—Outer Shaft	1	1	1	1	1	1	1	1
L-11	28P-19	Seal—Remote Control Shift Rod	2	2	2	2	2	2	2	2
L-12	10380-SF	U-Joint Assembly—Control Rod	1				1	1	1	1
	904388	U-Joint Assembly—Control Rod		1	1	1				
L-13	82-118-1	Gasket—Aperture Cover	1	1	1	1	1	1	1	1
L-14	82-96-1	Aperture Cover	1	1	1	1	1	1	1	1
L-15	545005-1	Bolt—5/16"-18 x 5/8" Hex head self-locking	4	4	4	4	4	4	4	4
L-16	500166-16	Expansion Plug—1 1/16"	1	1	1	1	1	1	1	1
N.S.	311903X	Boot Kit—Remote Control	1	1		1	1		1	
N.S.	82-483-1	Boot—standard	1	1		1	1		1	
N.S.	82-432-2	Boot—cup type	1	1		1	1		1	
N.S.	LW-3-9	Lockwire #18-M Gage (19" long)	3	3		3	3		3	
N.S.	313259	Valve—Road Speed Governor Control		1	1					
		Parts Listed Below Are Not Included In Assembly								
K-7	97-155-12	Gasket—remote control cover	1	1	1	1	1	1	1	1
K-9	545028-4	Bolt 7/16"—14 x 1-1/8" hex head self-locking	6	6	6	6	6	6	6	6

PARTS LISTED IN THIS CATALOG MAY NO LONGER BE AVAILABLE, USE WITH TRANSMISSION SUPERSEDING LIST.

MODEL 9072

SHIFT LEVER AND TOWER PARTS

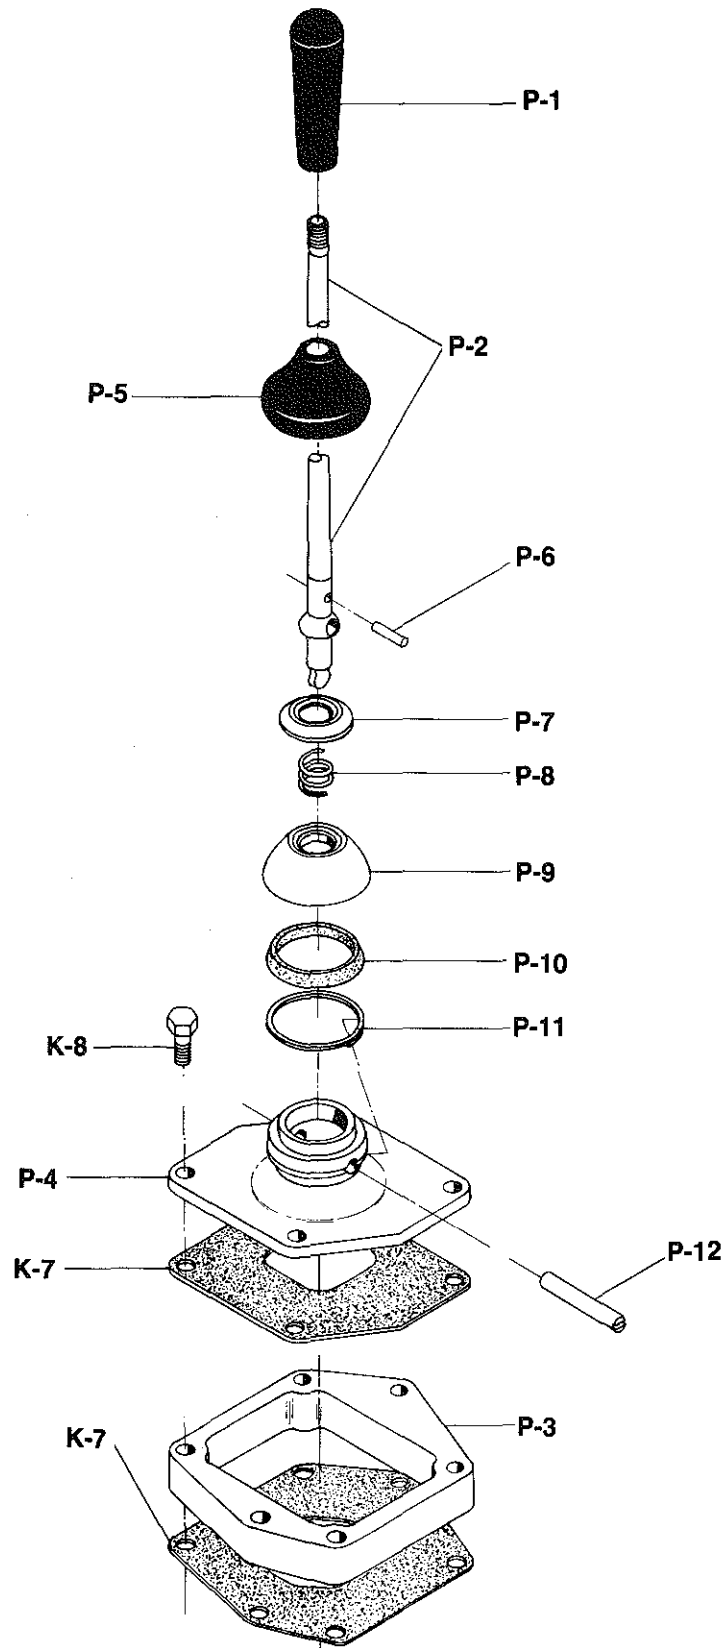

SPICER®**MODEL 9072****SHIFT LEVER AND DOME ASSEMBLY****T210-9072**

Ref. No.	Part Number	Part Description	311265X	85-16-37-17X	97-16-27-71X
	See Tab Bills	Shift Lever and Dome Assembly	1	1	1
P-1	39Q-27	Handle—Shift Lever	1	1	—
	39Q-29	Handle—Shift Lever	—	—	1
P-2	25Q-1223	Shift Lever—length 35 1/2" straight	1	—	—
	25Q-1570	Shift Lever—length 33" straight	—	1	—
	25Q-1702-83	Shift Lever—length 27 3/4" bent	—	—	1
P-3	85-37-9	Spacer—Dome to shifter housing	—	1	—
K-7	97-155-12	Gasket—center (6 holes)	4	—	—
K-8	545028-4	Bolt—7/16"-14 × 1 1/8" Hex head self-locking	4	—	—
	82-16-19X	Dome Assembly—(center) (Includes P-4 thru P-12)	1	—	—
	85-16-37X	Dome Assembly—(center) (Includes P-4 thru P-12)	—	—	1
	97-16-27X	Dome Assembly—(forward)(Includes P-4 thru P-12)	—	—	1
P-4	82-16-19	Dome—shift lever—2 5/32" height	1	—	—
	85-16-37	Dome—shift lever—3 5/32" height	—	1	—
	97-16-27	Dome—shift lever—3 5/8" height	—	—	1
P-5	55Q-5	Grommet—shift lever	1	1	1
P-6	286-SP	Pin—shift lever collar	1	1	1
P-7	55Q-7	Collar—compression	1	1	1
P-8	56Q-25	Spring—compression	1	1	1
P-9	54Q-13	Cap—compression	1	1	1
P-10	69Q-6	Wahser—friction	1	1	1
P-11	62-381-17	Snap Ring—rock shaft	1	1	1
P-12	53Q-15	Shaft—shift lever rock	1	1	1
		Parts Listed Below are not Included in Assembly			
K-7	97-155-12	Gasket—dome to shifter housing (6 holes)	—	1	—
	97-155-13	Gasket—dome to shifter housing (4 holes)	—	—	1
K-8	545028-4	Bolt—7/16"-14 × 1 1/8" Hex head self-locking	4	4	4

MODEL 9072

SPICER®



T210-9072

CLUTCH RELEASE CODE TABLE

Rel.Code See Tab Bill	CR-7 Yoke ★	Shaft		CR-6 Pedal Adjusting Arm	Rel.Code See Tab Bill	CR-7 Yoke ★	Shaft		CR-6 Pedal Adjusting Arm
		CR-1 Short	CR-2 Long				CR-1 Short	CR-2 Long	
1	105C-64	106C-1142	106C-1047	310233X	58	105C-137	106C-1141	106C-1169	310233X
2	105C-64	106C-1185	106C-438	—	59	105C-137	106C-1185	106C-438	—
3	105C-64	106C-1185	106C-939	310233X	60	105C-137	106C-1185	106C-617	310233X
4	105C-64	106C-1185	106C-1046	310233X	61	105C-137	106C-1185	106C-839	310233X
5	105C-64	106C-1185	106C-1047	310233X	62	105C-137	106C-1185	106C-939	310233X
6	105C-64	106C-1185	106C-1047	47-526-1-1X	63	105C-137	106C-1185	106C-939	310473X
7	105C-64	106C-1544	106C-839	310233X	64	105C-137	106C-1185	106C-953	310473X
					65	105C-137	106C-1185	106C-1046	310233X
8	105C-68	106C-1142	106C-438	—	66	105C-137	106C-1185	106C-1046	310473X
9	105C-68	106C-1142	106C-617	—	67	105C-137	106C-1185	106C-1047	310233X
10	105C-68	106C-1142	106C-617	310233X	68	105C-137	106C-1185	106C-1083	310233X
11	105C-68	106C-1142	106C-839	310233X	69	105C-137	106C-1185	106C-1094	—
12	105C-68	106C-1142	106C-939	310233X	70	105C-137	106C-1185	106C-1094	310233X
13	105C-68	106C-1142	106C-1046	310233X	71	105C-137	106C-1185	106C-1123	—
14	105C-68	106C-1142	106C-1047	310233X	72	105C-137	106C-1185	106C-1123	310233X
15	105C-68	106C-1278	106C-438	—	73	105C-137	106C-1185	106C-1367	—
					74	105C-137	106C-1185	106C-1367	310233X
16	105C-117	106C-1071	106C-939	310233X	75	105C-137	106C-1185	106C-1375	310873X
17	105C-117	106C-1071	106C-1094	310233X	76	105C-137	106C-1185	106C-1515	—
18	105C-117	106C-1142	106C-939	310233X	77	105C-137	106C-1185	106C-1529	—
19	105C-117	106C-1185	106C-438	—	78	105C-137	106C-1185	330610-5	—
20	105C-117	106C-1185	106C-617	310233X	79	105C-137	106C-1216	106C-617	310233X
21	105C-117	106C-1185	106C-839	47-526-1-1X	80	105C-137	106C-1278	106C-438	—
22	105C-117	106C-1185	106C-939	310233X	81	105C-137	106C-1278	106C-588	—
23	105C-117	106C-1185	106C-953	310873X	82	105C-137	106C-1278	106C-588	310233X
24	105C-117	106C-1185	106C-960	310233X	83	105C-137	106C-1278	106C-617	310233X
25	105C-117	106C-1185	106C-1046	310233X	84	105C-137	106C-1278	106C-939	310233X
26	105C-117	106C-1185	106C-1047	310233X	85	105C-137	106C-1278	106C-939	310873X
27	105C-117	106C-1185	106C-1083	—	86	105C-137	106C-1278	106C-960	310233X
28	105C-117	106C-1185	106C-1083	310233X	87	105C-137	106C-1278	106C-1046	—
29	105C-117	106C-1185	106C-1083	310473X	88	105C-137	106C-1278	106C-1046	310233X
30	105C-117	106C-1185	106C-1094	310233X	89	105C-137	106C-1278	106C-1047	—
31	105C-117	106C-1185	106C-1094	310873X	90	105C-137	106C-1278	106C-1047	310233X
32	105C-117	106C-1185	106C-1169	310233X	91	105C-137	106C-1278	106C-1083	310233X
33	105C-117	106C-1185	106C-1315	—	92	105C-137	106C-1278	106C-1094	310233X
34	105C-117	106C-1185	106C-1315	310233X	93	105C-137	106C-1278	106C-1375	310233X
35	105C-117	106C-1185	106C-1315	47-526-1-1X	94	105C-137	106C-1278	106C-1422	310233X
36	105C-117	106C-1185	106C-1417	310233X	95	105C-137	106C-1278	106C-1529	—
37	105C-117	106C-1185	106C-1417	310873X	96	105C-137	106C-1360	106C-1083	—
38	105C-117	106C-1185	106C-1490	310233X	97	105C-137	106C-1360	106C-1422	310233X
39	105C-117	106C-1278	106C-939	310233X	98	105C-137	106C-1375	106C-438	310233X
40	105C-117	106C-1278	106C-960	310873X	99	105C-137	106C-1498	106C-438	—
41	105C-117	106C-1278	106C-1047	310233X	100	105C-137	106C-1498	106C-617	310233X
42	105C-117	106C-1278	106C-1094	310233X	101	105C-137	106C-1498	106C-617	310473X
43	105C-117	106C-1278	106C-1315	310233X	102	105C-137	106C-1498	106C-939	310233X
44	105C-117	106C-1278	106C-1367	310233X	103	105C-137	106C-1498	106C-939	310473X
45	105C-117	106C-1360	106C-1083	310233X	104	105C-137	106C-1498	106C-953	310233X
46	105C-117	106C-1360	106C-1315	310233X	105	105C-137	106C-1498	106C-959	310233X
47	105C-117	Thru Shaft	106C-1550	—	106	105C-137	106C-1498	106C-1046	310233X
48	105C-117	Thru Shaft	106C-1558	—	107	105C-137	106C-1498	106C-1047	—
					108	105C-137	106C-1498	106C-1047	310233X
49	105C-124	106C-1185	106C-438	—	109	105C-137	106C-1498	106C-1083	310233X
50	105C-124	Thru Shaft	106C-1566	310233X	110	105C-137	106C-1498	106C-1094	—
51	105C-124	Thru Shaft	106C-1566	310473X	111	105C-137	106C-1498	330610-11	310233X
52	105C-124	Thru Shaft	106C-1566	310873X	112	105C-137	330601-1	106C-939	310233X
52A	105C-124	Thru Shaft	49-510-1	310233X					
53	105C-132	106C-1185	106C-1047	310233X	113	85-509-3	106C-1360	106C-1417	310233X
54	105C-132	106C-1185	106C-1083	310233X	114	85-509-3	Thru Shaft	106C-1578	310233X
55	105C-132	106C-1185	106C-1417	310873X	115	85-509-3	Thru Shaft	106C-1578	310873X
56	105C-132	106C-1185	46-510-9	—					
57	105C-132	106C-1278	46-510-9	—	116	312916	Thru Shaft	97-510-2	—

■ Use Clutch Release Bearing 7743X



★ CLUTCH RELEASE YOKE ATTACHING PARTS—Use one KEY 10-30, two SCREWS 330231 and two LOCK WASHERS 500356-12

PARTS LISTED IN THIS CATALOG MAY NO LONGER BE AVAILABLE, USE WITH TRANSMISSION SUPERSEDING LIST.




MODEL 9072

CLUTCH RELEASE CODE TABLE

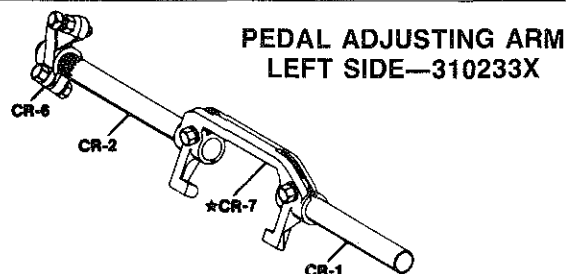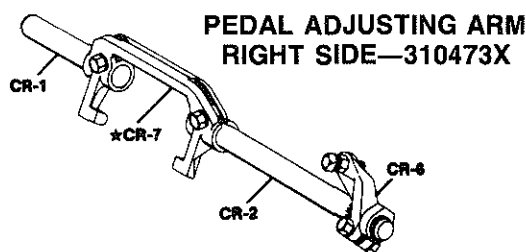T210-9072


CR-1 SHORT SHAFT

Part No.	Length
106C-1071	4.062"
106C-1141	5.125"
106C-1142	6.125"
106C-1185	5.750"
106C-1216	4.750"
106C-1278	4.812"
106C-1360	5.312"
106C-1375	6.781"
106C-1498	6.500"
106C-1544	7.000"
330601-1	6.250"



CR-2 LONG SHAFT

Part No.	Type	Length
106C-438	RS-5	14.000"
106C-588	RS-5	7.000"
106C-617	RS-8	10.469"
106C-839	RS-8	11.469"
106C-939	RS-8	10.000"
106C-953	RS-8	9.750"
106C-959	RS-8	11.968"
106C-960	RS-8	8.719"
106C-1046	RS-8	8.968"
106C-1047	RS-8	9.469"

CR-2 LONG SHAFT (Cont'd)


Part No.	Type	Length
106C-1083	RS-8	7.969"
106C-1094	RS-8	8.469"
106C-1123	RS-8	12.968"
106C-1169	RS-8	9.125"
106C-1315	RS-8	7.625"
106C-1367	RS-8	10.312"
106C-1375	RS-8	6.781"
106C-1417	RS-8	7.250"
106C-1422	RS-8	7.500"
106C-1490	RS-8	16.000"
106C-1515	RS-5	11.375"
106C-1529	RS-5	8.312"
330610-5	RS-8	9.469"
330610-11	RS-8	10.750"
46-510-9	RS-5	7.125"

CR-6 PEDAL ADJ. ARM

310233X	For Left Side Mtg.
310473X	For Right Side Mtg.
47-526-1-1X	Lever Type 7 1/4"
310873X	Lever Type 7 1/4"
■Lever type can be used on either right or left side.	

THRU SHAFT (used with Push Type Clutch)

Part No.	Type	Length
106C-1566	Splined	19.125"
106C-1550	Keyed	16.375"
106C-1558	Keyed	19.000"
106C-1578	Splined	19.500"
49-510-1	Keyed	19.120"
97-510-2	Splined	19.313"

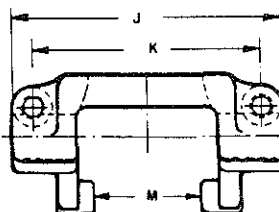

CLUTCH RELEASE YOKES

CR-7	Forging No.	Used With	Type	J	K	M
105C-64	F105C64	Spicer 15 1/2" SP	Pull	8.000"	6.500"	4.895"
105C-68	F105C99	Spicer 14" SP	Pull	7.125"	5.750"	4.132"
105C-117 ¹	F105C118	Spicer & Others	Push	8.375"	7.000"	4.885"
105C-124	F105C125	Spicer AL & AR	Push	3.750"	2.125"	2.885"
105C-132 ²	F105C118	Spicer & Others	Push	8.375"	7.000"	4.885"
105C-137	F105C138	Spicer 13" and	Pull	8.000"	6.500"	4.895"
	C105C138	14" 2P				
85-509-3 ³	F105C118	Spicer & Others	Push	8.375"	7.000"	4.885"

¹Machined washer surface on yoke front

²Machined washer surface on yoke rear (for clearance)

³Same as ¹ above except contains spring holes in lugs

■ Use 7743X Clutch Release Bearing

★ CLUTCH RELEASE YOKE ATTACHING PARTS—

Use one KEY 10-30, two SCREWS 330231 and two LOCK WASHERS 500356-12

NOTE: When changing from a two plate to single plate clutch or vice versa, a different bearing cap will be required.

MODEL 9072

SPICER®



T210-9072

SERVICE PARTS OVERHAUL KITS

Part Number	Part Description	313400-49X	313400-50X	313400-51X
	Major Overhaul Kits			
	For 1.75"-10 #205 Pilot Input Shaft	1	—	—
	For 1.75"-10 #306 Pilot Input Shaft	—	1	—
	For 2.00"-10 #306 Pilot Input Shaft	—	—	1
	Included only in Major Overhaul Kits			
500010-8	Woodruff Key #29	12	12	12
545065	Nut—Mainshaft (1.75"-16 SAE thread)	1	1	1
500566-8	Ball—Reverse Idler Shaft	2	2	2
97-35-81	Input Shaft—1.75"-10 #205 Pilot	1	—	—
97-35-66	Input Shaft—1.75"-10 #306 Pilot	—	1	—
97-35-65	Input Shaft—2.00"-10 #306 Pilot	—	—	1
313432-14X	Minor Overhaul Kit	1	1	1
313429-8X	Shifter Housing Small Parts Kit	1	1	1
313401-26X	Thrust Washer Kit	1	1	1
313432-14X	Minor Overhaul Kit (Included in Major Overhaul Kits)	1	1	1
	Bearings			
550959	Countershaft Front and Rear	4	4	4
550886	Reverse Idler Shaft	4	4	4
550953	Drive Gear Pocket	1	1	1
550992	Drive Gear Front	1	1	1
550925	Mainshaft Rear	1	1	1
97-463-36-1X	Oil Seal—Drive gear bearing cap	1	1	1
	(Includes installation sleeve and 2815 installation bulletin)			
97-463-33	Oil Seal—Mainshaft Rear Bearing Cap	1	1	1
545077	Packet #2 Molly Grease	1	1	1
545080-1	Anaerobic Sealant (0.5cc)	1	1	1
2770	Bearing Lube Instructions	1	1	1
2775	Pocket Bearing Installation	1	1	1
2783	Anaerobic Sealant Application for Mainshaft nut	1	1	1
2358	Maintenance Manual	1	1	1
312475-33X	Gasket Kit	1	1	1
313024-16X	Snap Ring Kit	1	1	1
312475-33X	Gasket Kit (Included in Major and Minor Overhaul Kits)	1	1	1
545056-9	Anaerobic Sealant—24cc tube	1	1	1
97-155-12	Gasket—Control Housing (Center Control)	1	1	1
97-155-13	Gasket—Control Housing (Forward Control)	1	1	1
97-223-1	Gasket—Drive Gear Bearing Cap	1	1	1
97-223-2	Gasket—Mainshaft Rear Bearing Cap	1	1	1
82-118-1	Gasket—Remote Control Aperture Cover	1	1	1
2754	Bulletin—Liquid Gasket	1	1	1
2770	Bulletin—Pocket Bearing Lube Instructions	1	1	1
2783	Bulletin—Mainshaft Nut	1	1	1

PARTS LISTED IN THIS CATALOG MAY NO LONGER BE AVAILABLE, USE WITH TRANSMISSION SUPERSEDING LIST.



MODEL 9072

SERVICE PARTS OVERHAUL KITS

T210-9072

Part Number	Part Description	313400-49X	313400-50X	313400-51X
313429-8X	Shifter Housing Small Parts Kit (Included in Major Overhaul Kits)	1	1	1
97-12-2	Interlock	3	3	3
97-438-19	Pin—Interlock	3	3	3
97-438-1	Plunger	1	1	1
97-12-4	Poppet	1	1	1
330739-1	Pin—Backup light	1	1	1
500593-6	Pin—Plunger	1	1	1
545000	Blocker Pin—(Center Control Shifter Housing only)	1	1	1
545010	Blocker Pin—(Forward Control Shifter Housing only)	1	1	1
NP-201	Warranty Plate	1	1	1
97-72-2	Spring—Plunger	1	1	1
97-72-29	Spring—Poppet	1	1	1
313401-26X	Thrust Washer Kit (Included in Major Overhaul Kits)	1	1	1
330810	Mainshaft—external—large (24T)	2	2	2
330814	Mainshaft—external—small (20T)	5	5	5
330730	Mainshaft—internal—small (15T)	5	5	5
330869	Mainshaft—internal—large (18T)	3	3	3
313024-16X	Snap Ring Kit (Included in Major and Minor Overhaul Kits)	1	1	1
97-381-1	Mainshaft—internal—small	5	5	5
97-381-4	Mainshaft—external—small	5	5	5
97-381-2	Drive Gear	1	1	1
54-381-1	Countershaft	4	4	4
98-381-1	Mainshaft—external—large	3	3	3
98-381-2	Mainshaft—internal—large	1	1	1
97-381-33	Countershaft	2	2	2
97-381-42	Input Shaft	1	1	1
97-381-32	Reverse Gear	2	2	2
97-381-41	Input Shaft Bearing Cap	1	1	1

MODEL 9072

SPICER®



T210-9072

TABULATED BILLS OF MATERIAL

Tab No.	Used By	For Use With Clutch	CLUTCH HOUSING			Drive Gear Input Shaft A-1	Drive Gear Bearing Cap Assembly F-2	Main Case Assembly G-1
			S A E	Assembly No. E-2	Rel. Code Pages 19			
Model 9072								
301321								
-1	Navistar	Pull Type	1	97-518-16-1X	—	97-35-65-1X	97-19-52-1X	97-15-54-1X
-2	General Use	Pull Type	1	97-518-16-1X	—	97-35-65-1X	97-19-52-1X	97-15-54-1X
-3	General Use	Pull Type	2	97-518-49-1X	—	97-35-65-1X	97-19-52-1X	97-15-54-1X
-4	General Use	Pull Type	2	97-518-18-1X	—	97-35-66-1X	97-19-52-1X	97-15-54-1X
-5	Navistar	Pull Type	2	312795X	—	97-35-81-1X	97-19-52-1X	97-15-54-1X
-6	Peterbilt	Pull Type	1	97-518-16-1X	—	97-35-65-1X	97-19-52-1X	97-15-54-1X
-7	Navistar	Pull Type	2	312795X	—	97-35-81-1X	97-19-52-1X	97-15-54-1X
-8	General Use	Pull Type	2	97-518-14-1X	62	97-35-66-1X	97-19-52-1X	97-15-54-1X
-9	General Use	Pull Type	2	97-518-14-1X	62	97-35-65-1X	97-19-52-1X	97-15-54-1X
-10	Navistar	Pull Type	1	97-518-16-1X	—	97-35-65-1X	97-19-52-1X	97-15-54-1X
-11	Drivetrain-Aust.	Pull Type	1	97-518-16-1X	—	97-35-65-1X	97-19-52-1X	97-15-54-1X
-12	General Use	Pull Type	1	97-518-16-1X	62	97-35-65-1X	97-19-52-1X	97-15-54-1X
-13	Ford	Pull Type	1	97-518-16-1X	—	97-35-65-1X	97-19-52-1X	97-15-54-1X
-14	Ford	Pull Type	1	97-518-16-1X	—	97-35-65-1X	97-19-52-1X	97-15-54-1X
-15	Ford	Pull Type	1	97-518-16-1X	—	97-35-65-1X	97-19-52-1X	97-15-54-1X
-16	Navistar	Pull Type	2	312795X	—	97-35-81-1X	97-19-52-1X	97-15-54-1X
-17	Navistar	Pull Type	2	312795X	—	97-35-81-1X	97-19-52-1X	97-15-54-1X
-18	Mack	Pull Type	1	97-518-28-1X	—	97-35-66-1X	97-19-52-1X	97-15-54-1X
-19	Mack	Pull Type	2	97-518-14-1X	62	97-35-65-1X	97-19-52-1X	97-15-54-1X
-20	Kenworth	Pull Type	1	97-518-16-1X	100	97-35-65-1X	97-19-52-1X	97-15-54-1X
-21	Volvo GM	Pull Type	1	97-518-25-1X	—	97-35-65-1X	97-19-52-1X	97-15-54-1X
-22	Freightliner	Pull Type	1	97-518-25-1X	—	97-35-65-1X	97-19-52-1X	97-15-54-1X
-23	Volvo GM	Pull Type	1	97-518-25-1X	—	97-35-65-1X	97-19-52-1X	97-15-54-1X
-24	Volvo GM	Pull Type	1	97-518-25-1X	—	97-35-65-1X	97-19-52-1X	97-15-54-1X
-25	Kenworth	Pull Type	1	97-518-16-1X	100	97-35-65-1X	97-19-52-1X	97-15-54-1X
-26	Ford	Pull Type	2	312795X	—	97-35-66-1X	97-19-52-1X	97-15-54-1X
-27	Volvo GM	Pull Type	1	97-518-25-1X	—	97-35-65-1X	97-19-52-1X	97-15-54-1X
-28 ★ ■	Isuzu	Pull Type	2	97-518-18-1X	62	97-35-66-1X	97-19-52-1X	97-15-54-1X
-29	Isuzu	Pull Type	2	97-518-14-1X	—	97-35-81-1X	97-19-52-1X	97-15-54-1X
-30	Crane Carrier	Pull Type	2	97-518-14-1X	—	97-35-65-1X	97-19-52-1X	97-15-54-1X
-31	Ford	Pull Type	1	97-518-16-1X	—	97-35-65-1X	97-19-52-1X	97-15-54-1X
-32	Mack	Pull Type	2	97-518-49-1X	—	97-35-66-1X	97-19-52-1X	97-15-54-1X
-33	Volvo GM	Pull Type	1	97-518-25-1X	—	97-35-65-1X	97-19-52-1X	97-15-54-1X
-34	Volvo GM	Pull Type	1	97-518-25-1X	—	97-35-65-1X	97-19-52-1X	97-15-54-1X

★ With Clutch Brake Assembly 125237

■ With 97-454-2-1X which has (1) each 97-454-2 Speedometer Sleeve and 97-463-34 Oil Seal

PARTS LISTED IN THIS CATALOG MAY NO LONGER BE AVAILABLE, USE WITH TRANSMISSION SUPERSEDING LIST.



MODEL 9072

TABULATED BILLS OF MATERIAL

T210-9072

Tab No.	Mainshaft Rear Bearing Cap Assembly H-2 (incl. Bushing, Seal)	SPEEDOMETER		End Yoke or Companion Flange 9	SHIFTER		
		Drive Gear or Signal Gear B-23	Driven Gear H-8		Housing Ass'y Pages 10-13	Lever & Dome Ass'y Page 17	Remote Control Pages 15
Model 9072							
301321							
-1	97-19-51-1X	—	—	—	97-16-79-2X	—	—
-2	97-19-51-1X	—	—	—	97-16-81-2X	—	—
-3	97-19-51-1X	—	—	—	97-16-81-2X	—	—
-4	97-19-51-1X	—	—	—	97-16-79-2X	—	—
-5	97-19-51-1X	—	—	—	97-16-81-2X	—	—
-6	97-19-51-1X	—	—	—	97-16-79-2X	—	—
-7	53-19-9-2X	—	—	—	97-16-81-2X	—	—
-8	97-19-51-1X	97-452-2	97-453-1	6-4-5351	97-16-81-2X	—	—
-9	97-19-51-1X	97-452-2	97-453-1	6-4-5351	97-16-81-2X	—	—
-10	97-19-51-1X	—	—	—	97-16-81-2X	—	—
-11	97-19-51-1X	97-452-6	97-453-7	6-4-5351	97-16-79-2X	—	—
-12	97-19-51-1X	97-452-14	—	6-4-5351	97-16-79-2X	85-16-37-17X	—
-13	97-19-51-1X	—	—	—	97-16-79-2X	—	—
-14	97-19-51-1X	—	—	—	97-16-81-2X	—	—
-15	97-19-51-1X	97-452-16	—	6-4-5351	97-16-81-2X	—	—
-16	97-19-51-1X	—	—	—	97-16-79-2X	—	—
-17	53-19-9-2X	—	—	—	97-16-79-2X	—	—
-18	97-19-51-1X	97-452-6	—	6-4-5351	97-16-81-2X	97-16-27-71X	—
-19	97-19-51-1X	97-452-6	97-453-7	6-3-4-41	97-16-79-2X	—	—
-20	97-19-51-1X	97-452-14	—	6-4-5351	97-16-79-2X	—	—
-21	97-19-51-1X	97-452-16	—	—	96-16-79-2X	—	—
-22	97-19-51-1X	97-452-16	—	—	97-16-81-2X	—	—
-23	97-19-51-1X	—	—	—	97-16-81-2X	—	—
-24	97-19-51-1X	97-452-2	97-453-1	6-4-5351	97-16-81-2X	—	—
-25	97-19-51-1X	97-452-14	—	6-4-5351-1	97-16-79-2X	—	—
-26	97-19-51-1X	97-452-14	—	5-4-6531-1	97-16-79-2X	—	—
-27	97-19-51-1X	—	—	—	97-16-79-2X	—	—
-28	97-19-51-1X	97-452-2	97-453-1	6-1-4881	97-16-79-2X	311265X	—
-29	97-19-51-1X	97-452-2	97-453-1	—	97-16-79-2X	—	—
-30	97-19-51-1X	97-452-2	97-453-1	6-4-5351	97-16-79-2X	—	—
-31	97-19-51-1X	97-452-14	—	6-4-5351-1	97-16-81-2X	—	—
-32	97-19-51-1X	97-452-14	—	—	97-16-81-2X	—	—
-33	97-19-51-1X	97-452-16	—	6-4-5351-1	97-16-81-2X	—	—
-34	97-19-51-1X	—	—	—	97-16-79-2X	—	—

For parts or service call us
Pro Gear & Transmission, Inc.



1 (877) 776-4600

(407) 872-1901

parts@eprogear.com

906 W. Gore St.

Orlando, FL 32805

